


# Compression Fittings

- Easy install, No tools required!
- Reuse existing tubing repeatedly
- High temperature and pressure rating
- Bio/Pharm & Analytical Industry standard

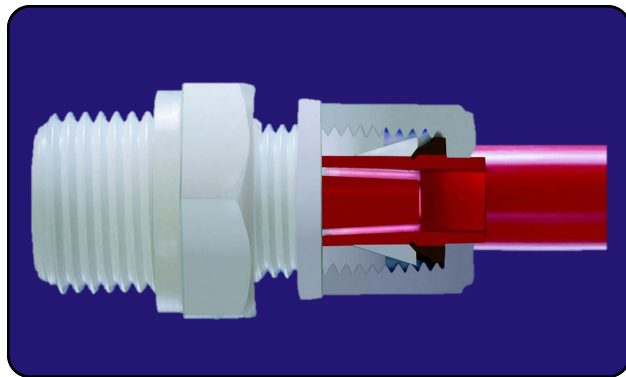


## Installation Instructions

### No Tools Required:

Traditional tubing connections require the use of a *cold* or *heated* iron to shape a portion of the tube end.

Compression fittings are secured by friction on the tube outside diameter. Designed for smooth PFA tubing, the double ferrule will not slip.

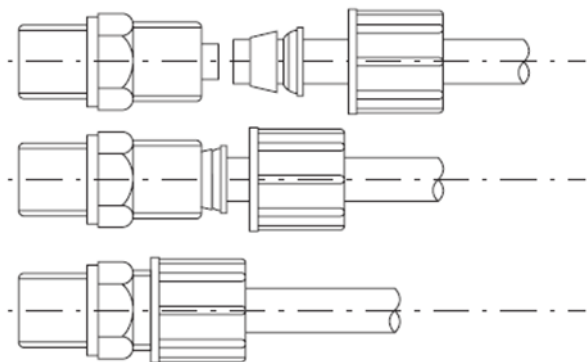

## Specifications

**Standard Materials:** PP, PVDF, PFA

**Available Materials\*:** E-CTFE, Nylon

### Standard Size Range:

- 1/8" x 1/4"
- 1/4" x 3/8"
- 3/8" x 1/2"
- 1/2" x 3/4"

### Available Size Range\*:

2 x 4mm through 18 x 20mm

\* Minimum order quantities apply


## Compression Components

PTFE Grip Ring





Sealing Cone  
(Zero Dead Volume)

PEEK Biting Ring

Nut (PVDF)

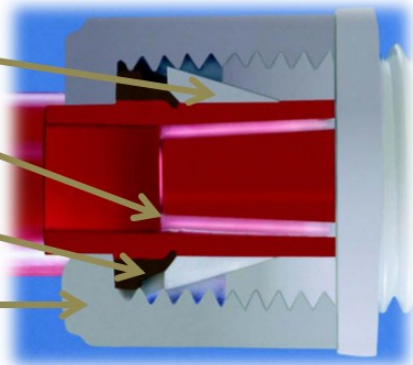

## Standard Fitting Styles

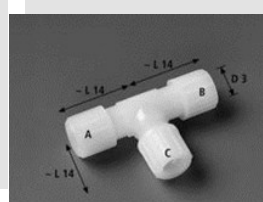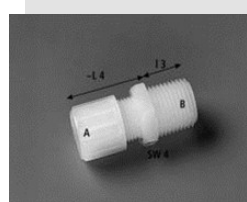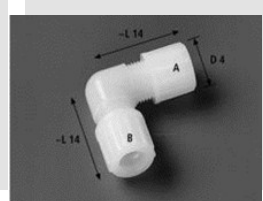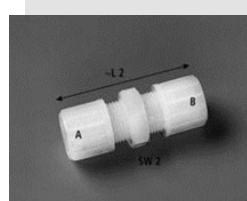

P.O. Box 653 • 35 Green Street, Malden, MA 02148 • Tel: (800) 343-3618, (781) 321-5409  
 Fax: (800) 426-7058 • Website: [www.asahi-america.com](http://www.asahi-america.com) • Email: [asahi@asahi-america.com](mailto:asahi@asahi-america.com)

Rev. 0311

**The  
Wet  
Process  
People™**